

High Performance Inverter

FRENIC-Ace **New**



FRENIC **Ace**

FUJI ELECTRIC INVERTERS

The FRENIC-Ace Inverters are full feature drives offering great value and maintain high performance through optimal design for a wide range of applications for various machines and devices.

The Next Generation Of Inverters Have Arrived

Introducing Our New Standard Inverter!



Enjoy A Full Range Of Applications

The standard inverter for the next generation, the FRENIC-Ace, can be used in most types of application—from fans and pumps to specialized machinery.

Nominal applied motor [kW]	3-phase 400V series				3-phase 200V series							
	ND rating		HD rating		HND rating		HHD rating		HND rating		HHD rating	
	Model	Rated output current	Model	Rated output current	Model	Rated output current	Model	Rated output current	Model	Rated output current	Model	Rated output current
0.4												
0.75												
1.5												
2.2												
3.7												
5.5												
7.5			FRN0022E2-4□ 17.5A	17.5A	FRN0022E2-4□ 17.5A	17.5A	FRN0022E2-4□ 13A	13A	FRN0030E2S-2□ 30A	30A	FRN0030E2S-2□ 25A	25A
11	FRN0022E2-4□ 21.5A	21.5A	FRN0029E2-4□ 23A	23A	FRN0029E2-4□ 23A	23A	FRN0037E2-4□ 24A	24A	FRN0040E2S-2□ 40A	40A	FRN0040E2S-2□ 33A	33A
15	FRN0029E2-4□ 28.5A	28.5A	FRN0037E2-4□ 31A	31A	FRN0037E2-4□ 31A	31A	FRN0044E2-4□ 30A	30A	FRN0056E2S-2□ 56A	56A	FRN0056E2S-2□ 47A	47A
18.5	FRN0037E2-4□ 37A	37A	FRN0044E2-4□ 38A	38A	FRN0044E2-4□ 38A	38A	FRN0059E2-4□ 39A	39A	FRN0069E2S-2□ 69A	69A	FRN0069E2S-2□ 60A	60A
22	FRN0044E2-4□ 44A	44A	FRN0059E2-4□ 45A	45A	FRN0059E2-4□ 45A	45A	FRN0072E2-4□ 45A	45A				
30	FRN0059E2-4□ 59A	59A	FRN0072E2-4□ 60A	60A	FRN0072E2-4□ 60A	60A	FRN0085E2-4□ 60A	60A	Coming Soon		Coming Soon	
37	FRN0072E2-4□ 72A	72A	FRN0085E2-4□ 75A	75A	FRN0085E2-4□ 75A	75A	FRN0105E2-4□ 75A	75A				
45	FRN0085E2-4□ 85A	85A	FRN0105E2-4□ 91A	91A	FRN0105E2-4□ 91A	91A	FRN0139E2-4□ 91A	91A				
55	FRN0105E2-4□ 105A	105A	FRN0139E2-4□ 112A	112A	FRN0139E2-4□ 112A	112A	FRN0168E2-4□ 112A	112A				
75	FRN0139E2-4□ 139A	139A	FRN0168E2-4□ 150A	150A	FRN0168E2-4□ 150A	150A	FRN0203E2-4□ 150A	150A				
90	FRN0168E2-4□ 168A	168A	FRN0203E2-4□ 176A	176A	FRN0203E2-4□ 176A	176A	FRN0240E2-4□ 176A	176A				
110	FRN0203E2-4□ 203A	203A	FRN0240E2-4□ 210A	210A	FRN0240E2-4□ 210A	210A	FRN0290E2-4□ 210A	210A				
132	FRN0240E2-4□ 240A	240A	FRN0290E2-4□ 253A	253A	FRN0290E2-4□ 253A	253A	FRN0361E2-4□ 253A	253A				
160	FRN0290E2-4□ 290A	290A	FRN0361E2-4□ 304A	304A	FRN0361E2-4□ 304A	304A	FRN0415E2-4□ 304A	304A				
200	FRN0361E2-4□ 361A	361A	FRN0415E2-4□ 377A	377A	FRN0415E2-4□ 377A	377A	FRN0520E2-4□ 377A	377A				
220	FRN0415E2-4□ 415A	415A	FRN0520E2-4□ 415A	415A	FRN0520E2-4□ 415A	415A	FRN0590E2-4□ 415A	415A				
250			FRN0590E2-4□ 477A	477A								
280	FRN0520E2-4□ 520A	520A			FRN0590E2-4□ 520A	520A						
315	FRN0590E2-4□ 590A	590A										
Rating condition	Overload current rating 120% -1min Max. ambient temp. 40°C		Overload current rating 150% -1min Max. ambient temp. 40°C		Overload current rating 120% -1min Max. ambient temp. 50°C		Overload current rating 150% -1min, 200% -0.5sec Max. ambient temp. 50°C		Overload current rating 120% -1min Max. ambient temp. 50°C		Overload current rating 150% -1min, 200% -0.5sec Max. ambient temp. 50°C	
Application	Fans, pumps Wire drawing		Vertical conveyance		Fans, pumps Wire drawing		Vertical conveyance Winding machines Printing machines		Fans, pumps Wire drawing		Vertical conveyance Winding machines Printing machines	

*3-phase 200V series supports only a product for Asia.




Customizable Logic

Customizable logic function is available as a standard feature. FRENIC-Ace has built-in customizable logic functions with a maximum of 200 steps including both digital and analog operation functions, giving customers the ability to customize their inverters—from simple logic functions to full-scale programming. Fuji Electric also has plans to offer programming templates for wire drawing machines, hoists, spinning machines, and other applications so that the FRENIC-Ace can be used as a dedicated purpose inverter.

Example: Hoist crane application

Programming the FRENIC-Ace main unit with the required logic for controlling a hoist

- (1) Set speed program
- (2) Reset the alarm by using the push-button switch
- (3) Mechanical limit switch function
- (4) Detect load
- (5) Automatic speed drive when no load is detected
- (6) Overload stop function

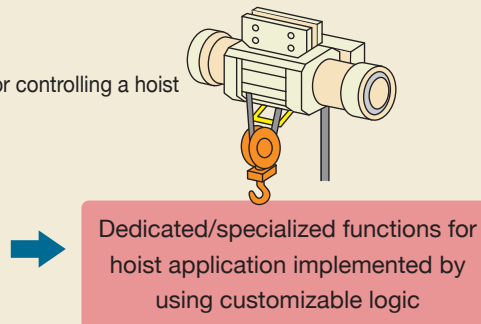

Superior Flexibility

FRENIC-Ace has readily available interface cards and various types of fieldbus / network to maximize its flexibility.

Option	Installation type
RS485 communications card PG interface (5V) card (Coming Soon) PG interface (12/15V) card	<p>RJ-45 connector</p> <p>Optional control terminal block</p> <p>Control terminal block</p>
DeviceNet communication card CC-Link communication card PROFIBUS-DP communication card (Coming Soon) EtherNet/IP communication card (Coming Soon) ProfiNet-RT communication card (Coming Soon) CANopen communication card (Coming Soon) Digital input/output interface card Analog input/output interface card	<p>Front face panel</p> <p>Optional front face keypad mount</p> <p>≥30kW(ND): option card is built-in</p>



Wide Variety Of Functions As A Standard Feature


- Sensorless dynamic torque vector control
- Motor vector control with PG (with optional card)
- Synchronous motor with sensorless vector control
- 2-channel on-board RS485 communications port
- Standard CANopen compatibility
- Removable keypad device
- Removable control terminal block board



Multi-Function Keypad (option)

FRENIC-Ace has two different multi-function keypads available

- Multi-function keypad with LCD display: Enhanced HMI functionality
- USB keypad: Connect to a computer for more efficient operation (set-up, troubleshooting, maintenance, etc)

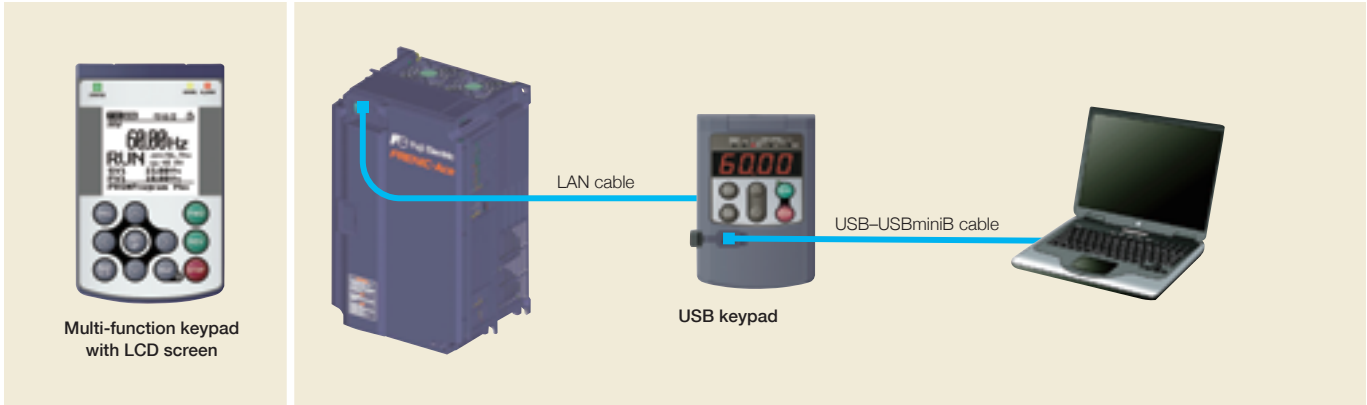

Functional Safety

FRENIC-Ace is equipped with STO functional safety function as a standard. Therefore output circuit magnetic contactors are not required for safe stop implementation. Enhanced standard features position FRENIC-Ace ahead of its class (Safety input: 2CH, output: 1CH).

■Complies with (coming soon)

EN ISO 13849-1: 2008, Cat.3 / PL=e

IEC/EN 61800-5-2: 2007 SIL3 (Safety feature: STO)

IEC/EN 60204-1: 2005/2006 Stop category 0

IEC/EN 62061: 2005 SIL3

IEC/EN 61508-1 to -7: 2010 SIL3



10 Years Lifetime Design

FRENIC-Ace components have a design life of ten years.

A longer maintenance cycle also helps to reduce running costs.

Design life	Main circuit capacitor		10 years*
	Electrolytic capacitors on PCB		10 years*
	Cooling fan		10 years*
	Life conditions	Ambient temperature	+40°C
Load rate		100% (HHD specifications) 80% (HND/HD/ND specifications)	

* ND specifications have a rated current of two sizes higher than HHD specifications, so the life is 7 years.

Standards

■RoHS Directive

Standard compliance with European regulations that limit the use of specific hazardous substances (RoHS)

<Six hazardous substances> Lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyl (PBB), polybrominated biphenyl ether (PBDE)

<About RoHS> Directive 2002/95/EC, issued by the European Parliament and European Council, limits the use of specific hazardous substances in electrical and electronic devices.

Global Compliance

■Standard compliance (coming soon)

EC Directives (CE Mark)



UL Standard (cUL Certified)





Standard Model Specifications

Three phase 400V class series

Items		Specifications								
Type (FRN□□□E2■-4E) ^{*10} (FRN□□□E2S-4A)		0022	0029	0037	0044	0059	0072			
Nominal applied motor ^{*1} [kW]		ND	11	15	18.5	22	30	37		
		HD	7.5	11	15	18.5	22	30		
		HND	7.5	11	15	18.5	22	30		
		HHD	5.5	7.5	11	15	18.5	22		
Rated capacity [kVA] ^{*2}		ND	16	22	28	34	45	55		
		HD	13	18	24	29	34	46		
		HND	13	18	24	29	34	46		
		HHD	9.9	14	18	23	30	34		
Rated voltage [V] ^{*3}		Three-phase 380 to 480V (With AVR)								
Output ratings		Rated current [A] ^{*4}		ND	21.5	28.5	37.0	44.0	59.0	72.0
				HD	17.5	23.0	31.0	38.0	45.0	60.0
				HND	17.5	23.0	31.0	38.0	45.0	60.0
				HHD	13.0	18.0	24.0	30.0	39.0	45.0
Overload capability		ND, HND		120% of nominal current for 1min						
		HD		150% of nominal current for 1min						
		HHD		150% of nominal current for 1min or 200% of nominal current for 0.5s						
Main power supply		Three-phase 380 to 480V (With AVR)								
Voltage/frequency variations		Voltage: +10 to -15% (Voltage unbalance:2% or less ^{*8} , Frequency: +5 to -5%)								
Input ratings		Rated current without DCR ^{*5} [A]		ND	33.0	43.8	52.3	60.6	77.9	94.3
				HD	23.2	33.0	43.8	52.3	60.6	77.9
				HND	23.2	33.0	43.8	52.3	60.6	77.9
				HHD	17.3	23.2	33.0	43.8	52.3	60.6
Rated current with DCR ^{*5} [A]		ND		21.1	28.8	35.5	42.2	57.0	68.5	
		HD		14.4	21.1	28.8	35.5	42.2	57.0	
		HND		14.4	21.1	28.8	35.5	42.2	57.0	
		HHD		10.6	14.4	21.1	28.8	35.5	42.2	
Required power supply capacity ^{*6} [kVA]		ND		15	20	25	29	39	47	
		HD		10	15	20	25	29	39	
		HND		10	15	20	25	29	39	
		HHD		7.3	10	15	20	25	29	
Braking		Braking torque ^{*7} [%]		ND	12%					
				HD	15%					
				HND	15%					
				HHD	20%					
		DC braking		Starting frequency: 0.0 to 60.0Hz, Braking time: 0.0 to 30.0s, Braking level: 0 to 60% (ND spec.), 0 to 80% (HD/HND spec.), 0 to 100% (HHD spec.) of nominal current						
Braking chopper		Built-in								
Braking resistor		Option								
EMC filter ^{*9}		Compliant with EMC Directives, Emission and Immunity: Category C3 (2nd Env.) (EN61800-3:2004)								
DC reactor (DCR)		ND		Option						
		HND, HD		Option						
		HHD		Option						
Enclosure (IEC60529)		IP20, UL open type								
Cooling method		Fan cooling								
Mass (Basic Type (EMC Filter Built-in Type)) [kg]		5.0(TBD)	5.0(TBD)	8.0(TBD)	9.0(TBD)	9.5(10.5)	10(11.2)			

*1 Fuji 4-pole standard motor
 *2 Rated capacity is calculated by assuming the output rated voltage as 440 V.
 *3 Output voltage cannot exceed the power supply voltage.
 *4 When the carrier frequency (F26) is set to below value or higher, the inverter is sure to be necessary to derate their nominal current.
 HHD spec.--type 0022,0029,0037,0044,0059,0072,0085,0105,0139,0168;10kHz, 0203 or above type of capacity:6kHz
 HND spec.--type 0022,0029,0037,0044,0059;10kHz, 0072,0085,0105,0139,0168;6kHz, 0203 or above type of capacity:4kHz
 HD,ND spec.--type 0022,0029,0037,0044,0059,0072,0085,0105,0139,0168,0203 or above type of capacity:4kHz
 The rated output current at HD/ND spec. is decreased 2% for every 1 °C (1.8 °F) when ambient temperature is +40°C (+104 °F) or more.
 *5 The value is calculated assuming that the inverter is connected with a power supply with the capacity of 500 kVA (or 10 times the inverter capacity if the inverter capacity exceeds 50 kVA) and %X is 5%.
 Be sure to use the DCR when applicable motor capacity is 75kW or above.
 *6 Obtained when a DC reactor (DCR) is used.
 *7 Average braking torque for the motor running alone. (It varies with the efficiency of the motor.)
 *8 Voltage unbalance (%)=(Max. voltage (V) - Min. voltage (V))/Three -phase average voltage (V) × 67 (IEC 61800 - 3) If this value is 2 to 3%, use an optional AC reactor (ACR).
 *9 The EMC Filter Built-in Type supports only a product for EU.
 *10 ■: S: Standard (basic type), E: EMC filter built-in type

Major Functions
Standard Model Specifications
Common Specifications
Basic Wiring Diagram
Terminal Functions
External Dimensions
Options

Standard Model Specifications

Three phase 400V class series

Items		Specifications											
Type (FRN□□□E2■-4E) ^{*1} (FRN□□□E2S-4A)		0085	0105	0139	0168	0203	0240	0290	0361	0415	0520	0590	
Nominal applied motor ^{*1} [kW]	ND	45	55	75	90	110	132	160	200	220	280	315	
	HD	37	45	55	75	90	110	132	160	200	220	250	
	HND	37	45	55	75	90	110	132	160	200	220	280	
	HHD	30	37	45	55	75	90	110	132	160	200	220	
Output ratings	Rated capacity [kVA] ^{*2}	ND	65	80	106	128	155	183	221	275	316	396	450
		HD	57	69	85	114	134	160	193	232	287	316	364
		HND	57	69	85	114	134	160	193	232	287	316	396
		HHD	46	57	69	85	114	134	160	193	232	287	316
	Rated voltage [V] ^{*3}		Three-phase 380 to 480V (With AVR)										
	Rated current [A] ^{*4}	ND	85.0	105	139	168	203	240	290	361	415	520	590
		HD	75.0	91.0	112	150	176	210	253	304	377	415	477
		HND	75.0	91.0	112	150	176	210	253	304	377	415	520
		HHD	60.0	75.0	91.0	112	150	176	210	253	304	377	415
	Overload capability	ND, HND	120% of nominal current for 1min										
		HD	150% of nominal current for 1min										
		HHD	150% of nominal current for 1min or 200% of nominal current for 0.5s										
Input ratings	Main power supply		Three-phase 380 to 480V (With AVR)			Three-phase 380 to 480V, 50/60Hz			Three-phase 380 to 440V, 50Hz Three-phase 380 to 480V, 60Hz ^{*9}				
	Voltage/frequency variations		Voltage: +10 to -15% (Voltage unbalance:2% or less ^{*8} , Frequency: +5 to -5%)										
	Rated current without DCR ^{*5} [A]	ND	114	140	-	-	-	-	-	-	-	-	-
		HD	94.3	114	140	-	-	-	-	-	-	-	-
		HND	94.3	114	140	-	-	-	-	-	-	-	-
		HHD	77.9	94.3	114	140	-	-	-	-	-	-	-
	Rated current with DCR ^{*5} [A]	ND	83.2	102	138	164	201	238	286	357	390	500	559
		HD	68.5	83.2	102	138	164	201	238	286	357	390	443
		HND	68.5	83.2	102	138	164	201	238	286	357	390	500
		HHD	57.0	68.5	83.2	102	138	164	201	238	286	357	390
	Required power supply capacity ^{*6} [kVA]	ND	58	71	96	114	139	165	199	248	271	347	388
		HD	47	58	71	96	114	140	165	199	248	271	307
HND		47	58	71	96	114	140	165	199	248	271	347	
HHD		39	47	58	71	96	114	140	165	199	248	271	
Braking	Braking torque ^{*7} [%]	ND	5 to 9%										
		HD	7 to 12%										
		HND	7 to 12%										
		HHD	10 to 15%										
	DC braking	Starting frequency: 0.0 to 60.0Hz, Braking time: 0.0 to 30.0s, Braking level: 0 to 60% (ND spec.), 0 to 80% (HD/HND spec.), 0 to 100% (HHD spec.) of nominal current											
Braking chopper	Option												
Braking resistor	Option												
EMC filter ^{*10}		Compliant with EMC Directives, Emission and Immunity: Category C3 (2nd Env.) (EN61800-3:2004)											
DC reactor (DCR)	ND	Option			Attached as standard								
	HND, HD	Option				Attached as standard							
	HHD	Option					Attached as standard						
Enclosure (IEC60529)		IP00, UL open type											
Cooling method		Fan cooling											
Mass (Basic Type (EMC Filter Built-in Type)) [kg]		25(26)	26(27)	30(31)	33(33)	40(40)	62(62)	63(63)	95(95)	96(96)	130(130)	140(140)	

*1 Fuji 4-pole standard motor

*2 Rated capacity is calculated by assuming the output rated voltage as 440 V.

*3 Output voltage cannot exceed the power supply voltage.

*4 When the carrier frequency (F26) is set to below value or higher, the inverter is sure to be necessary to derate their nominal current.

HHD spec.--type 0022,0029,0037,0044,0059,0072,0085,0105,0139,0168:10kHz, 0203 or above type of capacity:6kHz

HND spec.--type 0022,0029,0037,0044,0059:10kHz, 0072,0085,0105,0139,0168:6kHz, 0203 or above type of capacity:4kHz

HD,ND spec.--type 0022,0029,0037,0044,0059,0072,0085,0105,0139,0168,0203 or above type of capacity:4kHz

The rated output current at HD/ND spec. is decreased 2% for every 1 °C (1.8 °F) when ambient temperature is +40°C (+104 °F) or more.

*5 The value is calculated assuming that the inverter is connected with a power supply with the capacity of 500 kVA (or 10 times the inverter capacity if the inverter capacity exceeds 50 kVA) and %X is 5%.

Be sure to use the DCR when applicable motor capacity is 75kW or above.

*6 Obtained when a DC reactor (DCR) is used.

*7 Average braking torque for the motor running alone. (It varies with the efficiency of the motor.)

*8 Voltage unbalance (%)=(Max. voltage (V) - Min. voltage (V))/Three -phase average voltage (V) × 67 (IEC 61800 - 3) If this value is 2 to 3%, use an optional AC reactor (ACR).

*9 The 400 V class series with type 0203 or above is equipped with a set of switching connectors (male) which should be configured according to the power source voltage and frequency.

*10 The EMC Filter Built-in Type supports only a product for EU.

*11 ■: S: Standard (basic type), E: EMC filter built-in type



Standard Model Specifications

Three phase 200V class series (Basic Type)

Items		Specifications				
Type (FRN□□□E2S-2A) ^{*9}		0030	0040	0056	0069	
Nominal applied motor ^{*1} [kW]	HND	7.5	11	15	18.5	
	HHD	5.5	7.5	11	15	
Output ratings	Rated capacity [kVA] ^{*2}	HND	11	15	21	26
		HHD	9.5	13	18	23
	Rated voltage [V] ^{*3}		Three-phase 200 to 240V (With AVR)			
	Rated current [A] ^{*4}	HND	30	40	56	69
		HHD	25	33	47	60
	Overload capability	HND	120% of nominal current for 1min			
HHD		150% of nominal current for 1min or 200% of nominal current for 0.5s				
Input ratings	Main power supply		Three-phase 200 to 240V, 50/60Hz			
	Voltage/frequency variations		Voltage: +10 to -15% (Voltage unbalance:2% or less ^{*8} , Frequency: +5 to -5%)			
	Rated current without DCR ^{*5} [A]	HND	42.7	60.7	80.0	97.0
		HHD	31.5	42.7	60.7	80.0
	Rated current with DCR ^{*5} [A]	HND	28.8	42.2	57.6	71.0
		HHD	21.1	28.8	42.2	57.6
Required power supply capacity ^{*6} [kVA]	HND	10	15	20	25	
	HHD	7.3	10	15	20	
Braking	Braking torque ^{*7} [%]	HND	15%			
		HHD	20%			
	DC braking		Starting frequency: 0.0 to 60.0Hz, Braking time: 0.0 to 30.0s, Braking level: 0 to 60% (ND spec.), 0 to 80% (HD/HND spec.), 0 to 100% (HHD spec.) of nominal current			
	Braking chopper		Built-in			
Braking resistor		Option				
DC reactor (DCR)	HND	Option				
	HHD	Option				
Enclosure (IEC60529)		IP20, UL open type				
Cooling method		Fan cooling				
Mass [kg]		5.0	5.0	8.0	9.0	

*1 Fuji 4-pole standard motor
 *2 Rated capacity is calculated by assuming the output rated voltage as 220 V.
 *3 Output voltage cannot exceed the power supply voltage.
 *4 When the carrier frequency (F26) is set to below value or higher, the inverter is sure to be necessary to derate their nominal current.
 HHD spec.--type 0030,0040,0056,0069:10kHz,
 HND spec.--type 0030,0040,0056,0069:10kHz
 *5 The value is calculated assuming that the inverter is connected with a power supply with the capacity of 500 kVA (or 10 times the inverter capacity if the inverter capacity exceeds 50 kVA) and %X is 5%.
 *6 Obtained when a DC reactor (DCR) is used.
 *7 Average braking torque for the motor running alone. (It varies with the efficiency of the motor.)
 *8 Voltage unbalance (%)=(Max. voltage (V) - Min. voltage (V))/Three -phase average voltage (V) × 67 (IEC 61800 - 3)
 If this value is 2 to 3%, use an optional AC reactor (ACR).
 *9 Three phase 200V class series supports only a product for Asia

Major Functions

Standard Model Specifications

Common Specifications



Basic Wiring Diagram

Terminal Functions

External Dimensions

Options

Common Specifications

Items	Specifications	Remarks	
Output	Maximum frequency	- HHD/HND/HD spec.: 25 to 500 Hz variable (V/f control mode, Magnetic pole position sensorless vector control mode) (Up to 200 Hz under vector control with speed sensor) - ND spec.: 25 to 120 Hz variable (all control mode)	IMPG-VC
	Base frequency	25 to 500 Hz variable (in conjunction with the maximum frequency)	
	Starting frequency	0.1 to 60.0 Hz variable (0.0 Hz under vector control with speed sensor)	IMPG-VC
	Carrier frequency	Three phase 400V class - Type 0022,0029,0037,0044,0059: - 0.75 to 16kHz variable (HHD/HND/HD spec.) - 0.75 to 10kHz variable (ND spec.) - Type 0072,0085,0105,0139,0168: - 0.75 to 16kHz variable (HHD spec.) - 0.75 to 10kHz variable (HND/HD spec.) - 0.75 to 6kHz variable (ND spec.) - Type 0203 or above type of capacity: - 0.75 to 10kHz variable (HHD spec.) - 0.75 to 6kHz variable (HND/HD/ND spec.) Three phase 200V class - Type 0030,0040,0056,0069 - 0.75 to 16kHz variable (HHD/HND/ spec.) Note: Carrier frequency drops automatically to protect the inverter depending on environmental temperature and output current. (This auto drop function can be canceled.)	
	Output frequency accuracy (Stability)	- Analog setting: $\pm 0.2\%$ of maximum frequency $25 \pm 10^\circ\text{C}$ - Keypad setting: $\pm 0.01\%$ of maximum frequency -10 to $+50^\circ\text{C}$	
	Frequency setting resolution	- Analog setting: 0.05% of maximum frequency - Keypad setting: 0.01 Hz (99.99 Hz or less), 0.1 Hz (100.0 to 500.0 Hz) - Link setting: 0.005% of maximum frequency or 0.01 Hz (fixed)	
	Speed control range	- 1 : 1500 (Minimum speed : Nominal speed, 4-pole, 1 to 1500 rpm) - 1 : 100 (Minimum speed : Nominal speed, 4-pole, 15 to 1500 rpm) - 1 : 10 (Minimum speed : Nominal speed, 6-pole, 180 to 1800 rpm)	IMPG-VC IMPG-VF PM-SVC
	Speed control accuracy	- Analog setting: $\pm 0.2\%$ of maximum frequency or below $25 \pm 10^\circ\text{C}$ - Digital setting: $\pm 0.01\%$ of maximum frequency or below -10 to $+50^\circ\text{C}$ - Analog setting: $\pm 0.5\%$ of base frequency or below $25 \pm 10^\circ\text{C}$ - Digital setting: $\pm 0.5\%$ of base frequency or below -10 to $+50^\circ\text{C}$	IMPG-VC PM-SVC
	Control method	- V/f control - Speed sensor less vector control (Dynamic torque vector control) - V/f control with slip compensation active - V/f control with speed sensor (The PG option card is required.) - V/f Control with speed sensor (+Auto Torque Boost) (The PG option card is required.) - Vector control with speed sensor (The PG option card is required.) - Vector control without magnetic pole position sensor	VF IM-SVC(DTV) VF with SC IMPG-VF IMPG-ATB IMPG-VC PM-SVC
	Voltage/Frequency characteristic	- Possible to set output voltage at base frequency and at maximum output frequency (160 to 500 V). - Non-linear V/f setting (3 points): Free voltage (0 to 500 V) and frequency (0 to 500 Hz) can be set.	
Torque boost	- Auto torque boost (For constant torque load) - Manual torque boost: Torque boost value can be set between 0.0 and 20.0%. - Select application load with the function code. (Variable torque load or constant torque load)		
Control	Starting torque	Three phase 400V class - 200% or above (HHD spec.:type 0072 or below) / 150% or higher (HHD spec.:type 0085 or above) at reference frequency 0.5Hz - 120% or higher at reference frequency 0.5Hz, (HND/ND spec.) - 150% or higher at reference frequency 0.5Hz, (HD spec.) (Base frequency 50 Hz, with activating the slip compensation and the auto torque boost mode, applied motor is Fuji 4-pole standard motor.) Three phase 200V class - 200% or above (HHD spec.:type 0069 or below) at reference frequency 0.5Hz - 120% or higher at reference frequency 0.5Hz, (HND spec.) (Base frequency 50 Hz, with activating the slip compensation and the auto torque boost mode, applied motor is Fuji 4-pole standard motor.)	
	Start/Stop operation	- Keypad: Start and stop with  and  keys (Standard keypad) - External signals (digital inputs): Forward (Reverse) rotation, stop command (capable of 3-wire operation), coast-to-stop command, external alarm, alarm reset, etc. - Link operation: Operation via built-in RS-485 or field bus (option) communications - Switching operation command: Remote/local switching, link switching	



Common Specifications

Items	Specifications	Remarks	
Control	<ul style="list-style-type: none"> - Keypad: Settable with and keys - External volume: Available to be set with external frequency command potentiometer. (1 to 5 kΩ 1/2 W) - Analog input: 0 to ±10 V DC (±5 V DC)/ 0 to ±100% (terminal [12]) 0 to +10 V DC (+5 V DC)/ 0 to +100% (terminal [12]) +4 to +20 mA DC/ 0 to 100% (terminal [C1]) +4 to +20 mA DC/ -100 to 0 to 100% (terminal [C1]) 0 to +20 mA DC/ 0 to 100% (terminal [C1]) 0 to +20 mA DC/ -100 to 0 to 100% (terminal [C1]) 0 to +10 V DC (+5 V DC)/ 0 to +100% (terminal [V2]) 0 to +10 V DC (+5 V DC)/ -100 to 0 to +100% (terminal [V2]) - UP/DOWN operation: Frequency can be increased or decreased while the digital input signal is ON. - Multi-step frequency: Selectable from 16 different frequencies (step 0 to 15) - Pattern Operation Mode: Automatically run in accordance with the previously configured running time, rotation direction, acceleration/deceleration and reference frequency. Maximum allowable settings are 7 stages. - Link operation: Can be specified via built-in RS-485 or Can be specified via bus communications. (Option) - Switching frequency setting source: Two of frequency settings source can be switched with an external signal(digital input). Remote/local switching, Link switching - Auxiliary frequency setting: Inputs at terminals [12], [C1] or [V2] can be added to the main setting as auxiliary frequency settings. - Operation at a specified ratio: The ratio can be set by analog input signal. Inverse operation : Switchable from "0 to +10 VDC/0 to 100%" to "+10 to 0 VDC/0 to 100%" by external command. (terminals [12]/[V2]) : Switchable from "0 to -10 VDC/0 to -100%" to "-10 to 0 VDC/0 to -100%" by external command.(terminal [12]) : Switchable from "4 to +20 mA DC/0 to 100%" to "+20 to 4 mA DC/0 to 100%" by external command.(terminal [C1]) : Switchable from "0 to +20 mA DC/0 to 100%" to "+20 to 4 mA DC/0 to 100%" by external command.(terminal [C1]) - Pulse train input (standard): Pulse input = Terminal [X5], Rotational direction = Another input terminal except [X5]. Complementary output: Max. 100 kHz, Open collector output: Max. 30 kHz - Pulse train input (option):The PG option card is required. CW/CCW pulse, pulse + rotational direction Complementary output: Max. 100 kHz, Open collector output: Max. 30 kHz 	Analog input between DC+1 to +5V is available with analog bias/gain function for input.	
	Frequency setting		
	Acceleration/ Deceleration time	<ul style="list-style-type: none"> - Setting range: From 0.00 to 6000 s - Switching: The four types of acceleration/deceleration time can be set or selected individually (switchable during operation). - Acceleration/deceleration pattern: Linear acceleration/deceleration, S-shape acceleration/deceleration (weak, free (set by function codes)), curvilinear acceleration/deceleration - Deceleration mode (coast-to-stop): Shut-off of the run command makes the motor coast to a stop. - ACC./DEC. time for "Jogging operation" can be set. (0.00 to 6000s) - Deceleration time for forcible stop: Deceleration stop by the forcible stop (STOP). S-curve will be canceled during "Force to Stop". 	
	Frequency limiter (Upper limit and lower limit frequencies)	<ul style="list-style-type: none"> - Specifies the upper and lower limits in Hz. - Selectable for the operation performed when the reference frequency drops below the lower limit specified by related function code. 	
	Bias for frequency/ PID command	<ul style="list-style-type: none"> - Bias of set frequency and PID command can be independently set(setting range: 0 to ±100%). 	
	Analog input	<ul style="list-style-type: none"> - Gain : Set in the range from 0 to 200% - Off-set : Set in the range from -5.0 to +5.0% - Filter : Set in the range from 0.00s to 5.00 s - Polarity : Select from ± or + 	
	Jump frequency	<ul style="list-style-type: none"> - Three operation points and their common jump width (0.0 to 30.0 Hz) can be set. 	
	Timer operation	<ul style="list-style-type: none"> - Operate and stop by the time set with keypad. (1 cycle operation) 	
	Jogging operation	<ul style="list-style-type: none"> - Operation with key (standard keypad), or key (multi-functional keypad), or digital contact input FWD or REV.(Exclusive acceleration/deceleration time setting, exclusive frequency setting) 	
	Auto-restart after momentary power failure		
(Trip at power failure)	The inverter trips immediately after power failure.		
(Trip at power recovery)	Coast-to-stop at power failure and trip at power recovery		
(Deceleration stop)	Deceleration stop at power failure, and trip after stoppage		
(Continue to run)	Operation is continued using the load inertia energy.		
(Start at the frequency selected before momentary power failure)	Coast-to-stop at power failure and start after power recovery at the frequency selected before momentary stop.		

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions

External Dimensions

Options

Common Specifications

Items	Specifications	Remarks
(Start at starting frequency)	Coast-to-stop at power failure and start at the starting frequency after power recovery.	
(Start at the searched frequency)	Coast-to-stop at power failure and start at the searched frequency after power recovery.	
Hardware current limiter	- Limits the current by hardware to prevent an overcurrent trip caused by fast load variation or momentary power failure, which cannot be covered by the software current limiter. This limiter can be canceled.	
Software current limiter	- Automatically reduces the frequency so that the output current becomes lower than the preset operation level.	
Operation by commercial power supply	- With commercial power selection command, the inverter outputs 50/60 Hz (SW50,SW60).	
Slip compensation	- Compensates the motor slip in order to keep their speed at the reference one regardless of their load torque. - Adjustable compensation time constant is possible.	
Droop control	- In a machine driven with multi-motor system, this function adjusts the speed of each motor individually to balance their load torque.	
Torque limiter	Control output torque or torque current so that output torque or torque current are preset limiting value or less. (The torque current limit is only available in IMPG-VC or PM-SVC mode.) - Switchable between 1st and 2nd torque limit values.	
Torque current limiter	- "Torque limit" and "Torque current limit" are selectable. - "Torque limit" or "Torque current limit" by analog input.	IMPG-VC PM-SVC
Overload stopping	- When detected torque or current exceed the preset value, inverter will decelerate and stop or will coast to stop a motor.	
PID Control	- PID processor for process control/dancer control - Normal operation/inverse operation - PID command: Keypad, analog input (from terminals [12], [C1] and [V2]), Multi-step setting(Selectable from 3 points), RS-485 communication - PID feedback value (from terminals [12], [C1] and [V2]) - Alarm output (absolute value alarm, deviation alarm) - Low liquid level stop function - Anti-reset wind-up function - PID output limiter - Integration reset/hold	
Auto-reset	- The auto-reset function that makes the inverter automatically attempt to reset the tripped state and restart without issuing an alarm output (for any alarm) even if any protective function subject to reset is activated. - The allowable maximum number of reset times for the inverter to automatically attempt to escape the tripped state is 20.	
Auto search for idling motor speed	- The inverter automatically searches for the idling motor speed to start to drive without stopping. (Motor constants must be needed tuning: Auto-tuning (offline))	
Automatic deceleration	- If the DC link bus voltage or calculated torque exceeds the automatic deceleration level during deceleration, the inverter automatically prolongs the deceleration time to avoid overvoltage trip. (It is possible to select forcible deceleration actuated when the deceleration time becomes three times longer.) - If the calculated torque exceeds automatic deceleration level during constant speed operation, the inverter avoids overvoltage trip by increasing the frequency.	
Deceleration characteristic (improved braking capacity)	- The motor loss is increased during deceleration to reduce the regenerative energy in the inverter to avoid overvoltage trip.	
Auto energy saving operation	- The output voltage is controlled to minimize the total power loss of the motor and the inverter at a constant speed.	
Overload prevention control	- If the ambient temperature or internal IGBT junction temperature is almost near the overheat level due to overload, the inverter drops its output frequency automatically in order to escape overload situation.	
Auto-tuning (off-line)	- Measures the motor parameters while the motor is stopped or running, for setting up motor parameters. - Tuning mode to only identify %R1 and %X. - Tuning mode to identify the parameters for PM motor.	
Auto-tuning (on-line)	- Automatically adjusts motor parameters while the motor is driving in order to prevent the motor speed fluctuation caused by the temperature rise of the motor.	
Cooling fan ON/OFF control	- Detects inverter internal temperature and stops cooling fan when the temperature is low. - the fan control signal can be output to an external device.	
1st to 2nd motor settings	- Switchable among the two motors. It is possible to set the base frequency, rated current, torque boost, and electronic thermal slip compensation as the data for 1st to 2nd motors.	
Universal DI	The status of external digital signal connected with the universal digital input terminal is transferred to the host controller.	
Universal DO	Digital command signal from the host controller is output to the universal digital output terminal.	
Universal AO	The analog command signal from the host controller is output to the analog output terminal.	
Speed control	- Notch filter for vibration control (For IMPG-VC) - Selectable among the four set of the auto speed regulator (ASR) parameters. (The PG option card is required.)	IMPG-VC PM-SVC
Line speed control	In a machine such as winder/unwinder, regulates the motor speed to keep the peripheral speed of the roll constant. (The PG option card is required.)	IMPG-VF
Positioning control with pulse counter	The positioning control starts from the preset start point and counts the feedback pulses from PG inside the inverter. The motor can be automatically started decelerating to the sleep speed which can be detected the target position so that the motor can stop near the position.(The PG option card is required.)	Excluded IMPG-VC PM-SVC



Common Specifications

Items	Specifications	Remarks	
Control	Master-follower operation	Enables synchronous operation of two motors equipped with a pulse generator(PG).(The PG option card is required.)	
	Pre-excitation	Excitation is carried out to create the motor flux before starting the motor.(The PG option card is required.)	IMPG-VC
	Zero speed control	The motor speed is held to zero by forcibly zeroing the speed command.(The PG option card is required.)	IMPG-VC
	Servo lock	Stops the motor and holds the motor in the stopped position.(The PG option card is required.)	IMPG-VC
	DC braking	When the run command turns OFF and the motor speed fall below the preset DC braking starting speed, the inverter starts to inject DC current into the motor in order to stop the motor. When the run command turns ON,the inverter starts to inject DC current into the motor in order to pre-excite.	
	Mechanical brake control	- The inverter can output the signal which ON/OFF timing adjusted so that the mechanical brake can be turned in conjunction with detected current, torque, frequency, and release/apply delay timers. - Mechanical brake interlock input	Excluded PM-SVC
	Torque control	- Analog torque/torque current command input - Speed limit function is provided to prevent the motor from becoming out of control. - Torque bias (analog setting, digital setting)	IMPG-VC
	Rotational direction control	- Select either of reverse or forward rotation prevention.	
	Customizable logic interface	The digital logic circuits and an analog arithmetic circuits can be chosen and connected with digital/analog input/output signals. The simple relay sequence which the customers demands can be constituted and made to calculate. - Logic circuit (Digital) AND, OR, XOR, flip-flops, rising/falling edge detection, counters, etc. (Analog) Addition, subtraction, multiplication, division, limiter, absolute value, sign inversion addition, comparison, highest selection, lowest selection, average value, measure conversion. - Multifunctional timer On-delay, off-delay, pulse train, etc. Setting range: 0.0 to 600 s - Input/output signal terminal input / output, inverter control function - Others The 200 steps are available. Each step has 2 inputs and 1 output.	
	Applicable functions for - Wire drawing machine - Hoist - Spinning machine (Traverse)	The specific functions which is suitable for each application field are realized by customizable logics.	
Indicate	Display	Detachable with 7 segments LEDs (4 digits) , 7 keys(PRG/RESET,FUNC/DATA,UP,DOWN, RUN,STOP,SHIFT) and 6LED indicator (KEYPAD CONTROL,HZ,A,kW,x10,RUN)	
	Running/Stopping	Speed monitor (reference frequency, output frequency, motor speed, load shaft speed, line speed, and speed indication with percent), Output current in RMS[A], Output voltage in RMS[V], Calculated torque [%], Input power [kW], PID command value, PID feedback value, PID output, Timer (Timer operation)[s], Load factor [%], Motor output [kW] Torque current [%] , Magnetic flux command [%], Analog input[%], Input watt hour [kWh] Constant feeding rate time (set value) (min), Constant feeding rate time (running) (s)	
	Maintenance monitor	- Displays DC link bus voltage, Max. Output current in RMS, Input watt-hour, Input watt-hour data, Temperature (inside the inverter and heat sink, Maximum value of each one), Capacitance of the DC link bus capacitor, Lifetime of DC link bus capacitor (elapsed hours and remaining hours), Cumulative run time of power-ON time counter of the inverter, electrolytic capacitors on the printed circuit boards, cooling fan and each motor, Remaining time before the next motor maintenance, Remaining startup times before the next maintenance, Number of startups (of each motor), Light alarm factors (Latest to 3rd last), Contents and numbers of RS-485 communications errors, Option error factors , Number of option errors ,ROM version of Inverter, Keypad and Option port.	
	I/O checking	Shows the status of the terminal Digital input/output, Relay out, Analog input/output.	
	Trip mode	Displays the cause of trip by codes.	
	Light-alarm	Shows the light-alarm display /-al.	
	Running or trip mode	- Trip history: Saves and displays the cause of the last four trips (with a code). - Saves and displays the detailed operation status data of the last four trips.	
Operating environment	Installation location	Indoors	
	Ambient	Standard (Open Type) -10 to +50°C (HHD/HND spec.) -10 to +40°C (HD/ND spec.) NEMA/UL Type 1 -10 to +40°C (HHD/HND spec.) -10 to +30°C (HD/ND spec.)	
	Ambient humidity	5 to 95%RH (without condensation)	
	Atmosphere	Shall be free from corrosive gases, flammable gases, oil mist, dusts, vapor, water drops and direct sunlight. (Pollution degree 2 (IEC60664-1)) The atmosphere must contain only a low level of salt. (0.01 mg/cm2 or less per year)	

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions

External Dimensions

Options

Common Specifications

Items	Specifications	Remarks																									
Operating environment	Altitude 1000m or lower If the inverter is used in an altitude above 1000 m, you should apply an output current derating factor as listed in below table. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Altitude</th> <th>Output current derating factor</th> </tr> </thead> <tbody> <tr> <td>1000m or lower</td> <td>1.00</td> </tr> <tr> <td>1000 to 1500m</td> <td>0.97</td> </tr> <tr> <td>1500 to 2000m</td> <td>0.95</td> </tr> <tr> <td>2000 to 2500m</td> <td>0.91</td> </tr> <tr> <td>2500 to 3000m</td> <td>0.88</td> </tr> </tbody> </table>	Altitude	Output current derating factor	1000m or lower	1.00	1000 to 1500m	0.97	1500 to 2000m	0.95	2000 to 2500m	0.91	2500 to 3000m	0.88														
	Altitude	Output current derating factor																									
1000m or lower	1.00																										
1000 to 1500m	0.97																										
1500 to 2000m	0.95																										
2000 to 2500m	0.91																										
2500 to 3000m	0.88																										
Vibration	<table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Three phase 400V class series</th> <th>TYPE:0203 or below</th> <th>TYPE:0240 or above</th> </tr> </thead> <tbody> <tr> <td>2 to less than 9Hz</td> <td>3mm:(Max. amplitude)</td> <td>3mm:(Max. amplitude)</td> </tr> <tr> <td>9 to less than 20Hz</td> <td>9.8m/s²</td> <td>2m/s²</td> </tr> <tr> <td>20 to less than 55Hz</td> <td>2m/s²</td> <td>2m/s²</td> </tr> <tr> <td>55 to less than 200Hz</td> <td>1m/s²</td> <td>1m/s²</td> </tr> </tbody> </table> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Three phase 200V class series</th> <th>TYPE:0069 or below</th> </tr> </thead> <tbody> <tr> <td>2 to less than 9Hz</td> <td>3mm:(Max. amplitude)</td> </tr> <tr> <td>9 to less than 20Hz</td> <td>9.8m/s²</td> </tr> <tr> <td>20 to less than 55Hz</td> <td>2m/s²</td> </tr> <tr> <td>55 to less than 200Hz</td> <td>1m/s²</td> </tr> </tbody> </table>	Three phase 400V class series	TYPE:0203 or below	TYPE:0240 or above	2 to less than 9Hz	3mm:(Max. amplitude)	3mm:(Max. amplitude)	9 to less than 20Hz	9.8m/s ²	2m/s ²	20 to less than 55Hz	2m/s ²	2m/s ²	55 to less than 200Hz	1m/s ²	1m/s ²	Three phase 200V class series	TYPE:0069 or below	2 to less than 9Hz	3mm:(Max. amplitude)	9 to less than 20Hz	9.8m/s ²	20 to less than 55Hz	2m/s ²	55 to less than 200Hz	1m/s ²	
Three phase 400V class series	TYPE:0203 or below	TYPE:0240 or above																									
2 to less than 9Hz	3mm:(Max. amplitude)	3mm:(Max. amplitude)																									
9 to less than 20Hz	9.8m/s ²	2m/s ²																									
20 to less than 55Hz	2m/s ²	2m/s ²																									
55 to less than 200Hz	1m/s ²	1m/s ²																									
Three phase 200V class series	TYPE:0069 or below																										
2 to less than 9Hz	3mm:(Max. amplitude)																										
9 to less than 20Hz	9.8m/s ²																										
20 to less than 55Hz	2m/s ²																										
55 to less than 200Hz	1m/s ²																										
Storage environment	<table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Temperature</th> <th rowspan="2">Avoid such places where the inverter will be subjected to sudden changes in temperature that will cause condensation to form.</th> </tr> </thead> <tbody> <tr> <td>-25 to +70°C (in transport)</td> </tr> <tr> <td>-25 to +65°C (in storage)</td> <td></td> </tr> </tbody> </table>	Temperature	Avoid such places where the inverter will be subjected to sudden changes in temperature that will cause condensation to form.	-25 to +70°C (in transport)	-25 to +65°C (in storage)																						
	Temperature	Avoid such places where the inverter will be subjected to sudden changes in temperature that will cause condensation to form.																									
-25 to +70°C (in transport)																											
-25 to +65°C (in storage)																											
Relative humidity	5 to 95%RH																										
Atmosphere	The inverter must not be exposed to dust, direct sunlight, corrosive or flammable gases, oil mist, vapor, water drops or vibration. The atmosphere must contain only a low level of salt. (0.01 mg/cm ² or less per year)																										
Atmospheric pressure	86 to 106kPa (during storage)																										
	70 to 106kPa (during transportation)																										


*Note : The meaning of the described abbreviations are shown as follows.

VF	V/f control
IM-SVC(DTV)	Speed sensorless vector control (Dynamictorquevector control)
VF with SC	V/f control with slip compensation
IMPG-VF	V/f control with speed sensor (The PG option card is required.)
IMPG-ATB	V/f control with speed sensor (+Auto Torque Boost)(The PG option card is required.)
IMPG-VC	Vector control with speed sensor (The PG option card is required.)
PM-SVC	Magnetic pole position sensorless vector control



Basic Wiring Diagram

Standard Terminal Block Board Model

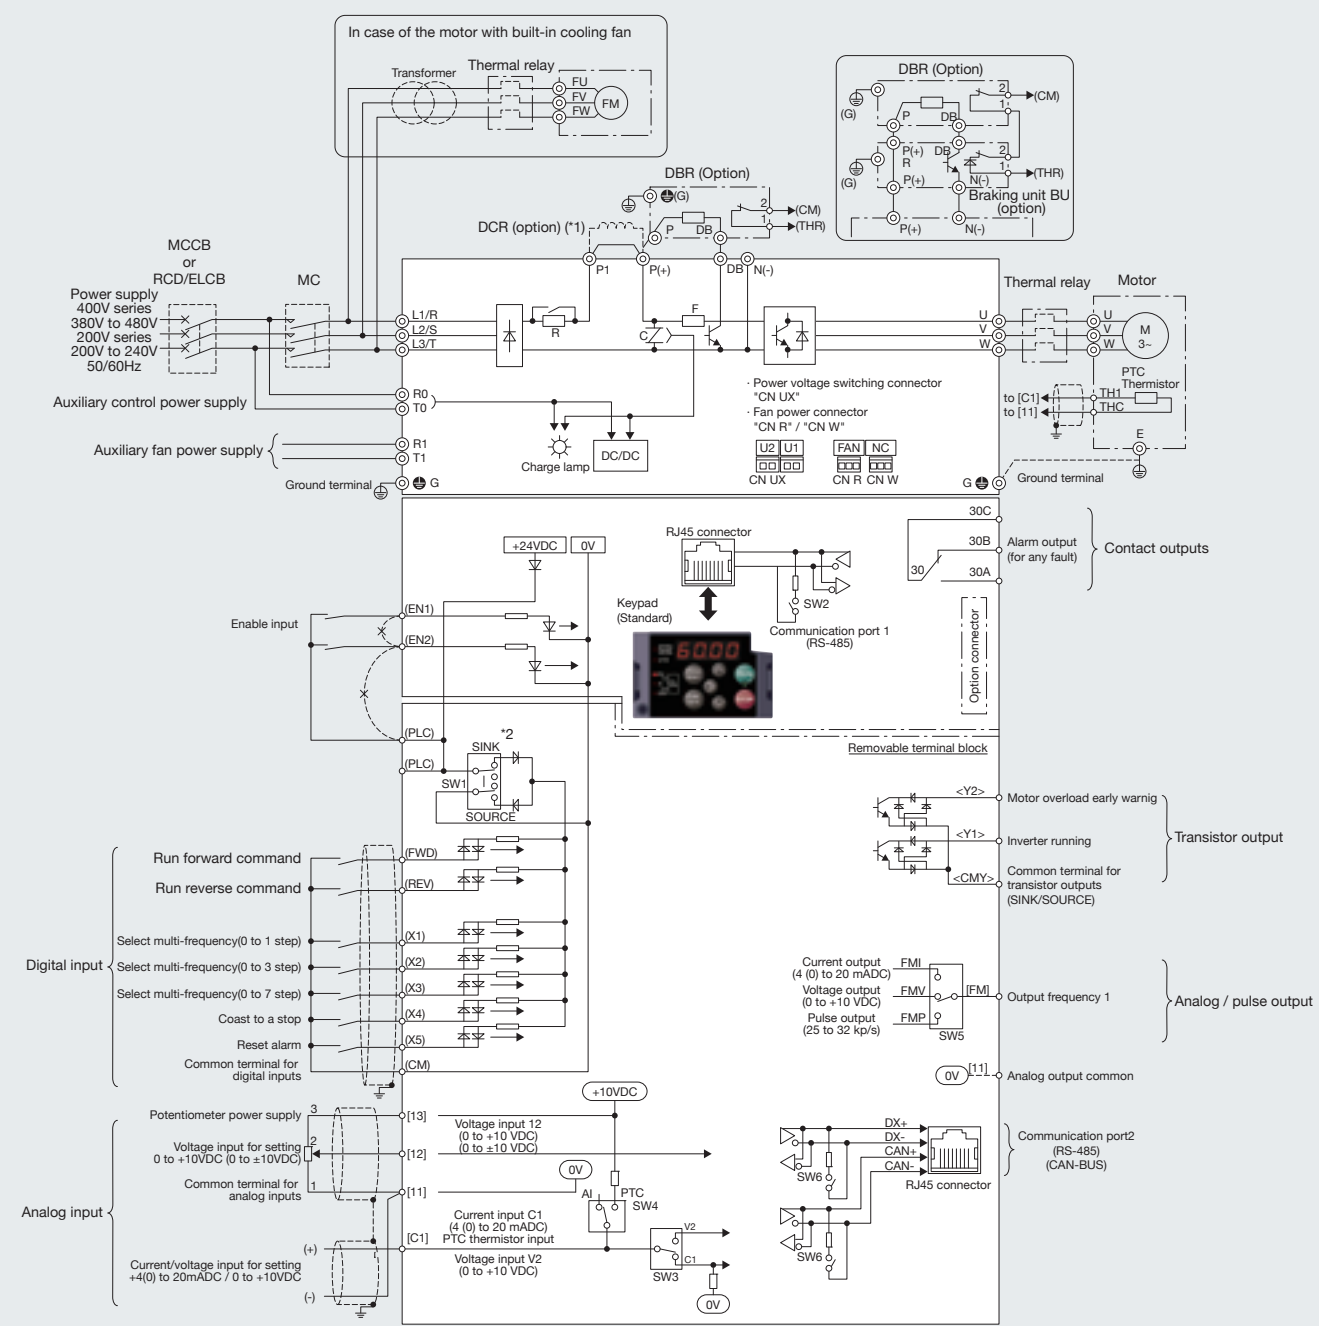

DBR: Dynamic Braking Resistor
 DCR: DC reactor
 RCD: Residual-current-operated protective device
 ELCB: Earth leakage circuit breaker
 MC: Magnetic contactor
 MCCB: Molded case circuit breaker

*1 When connecting an optional DC reactor (DCR), remove the jumper bar from the terminals P1 and P(+). The type 0139 (ND spec), 0168 (HD spec.) and higher types than 0203 are sure to connect the DCR (400V only). Use a DCR when the capacity of the power supply transformer exceeds 500 kVA and is 10 times or more the inverter rated capacity, or when there are thyristor-driven loads in the same power supply line.
 *2 The default setting is "Source logic" for EU model.



NOTE

This wiring diagram is to be used as a reference only when using standard terminal block model. When wiring your inverter and/or before applying power, please always follow the connection diagrams and the relevant information written in the User's Manual.

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions

External Dimensions

Options

Terminal Functions

Category	Symbol	Name	Functions	Remarks	
Main circuit	L1/R, L2/S, L3/T	Main circuit power inputs	Connect the three-phase input power lines.		
	R0, T0	Auxiliary power input for the control circuit	For a backup of the control circuit power supply, connect AC power lines same as that of the main power input.	Type 0059 or above (400V only)	
	R1, T1	Auxiliary power input for the cooling fans	Normally, no need to use these terminals. Use these terminals for an auxiliary power input of the fans in a power system using a power regenerative PWM converter.	Type 0203 or above (400V only)	
	U, V, W	Inverter outputs	Connect a three-phase motor.		
	P(+), P1	For DC REACTOR connection	Connects a DC REACTOR		
	P(+), N(-)	For BRAKING UNIT connection/For DC bus	Connects a braking resistor via the braking unit. Used for a DC bus connection system.		
	P(+), DB	Braking resistor	Connect an external braking resistor (option).	Type 0072 or below (400V series) Type 0069 or below (200V series)	
	⊕G	Grounding for inverter	Grounding terminals for the inverter.		
Analog inputs	[13]	Power supply for the potentiometer	Power supply (+10 VDC) for frequency command potentiometer (Variable resistor : 1 to 5 kΩ is applicable). The potentiometer of 1/2 W rating or more should be connected.	Maximum supply rating : 10 VDC, 10 mADC.	
	[12]	Analog setting voltage input	- External input voltage to be used as a below command.	Input impedance : 22 kΩ Maximum input level : ±15 VDC Input level is limited among -10 to 10 VDC regardless of excessive input of ±10 VDC. Gain : 0 to 200% Offset : 0 to ±5% Bias : ±100% Filter : 0.00 to 5.00s	
		<Normal operation>	0 to +10 VDC / 0 to 100% (0 to +5 VDC / 0 to 100%) 0 to ±10 VDC / 0 to ±100% (0 to ±5 VDC / 0 to ±100%)		
		<Inverse operation>	+10 to 0 to -10VDC / -100% to 0 to 100% -10V to 0 to +10VDC / +100% to 0 to -100%		
		(PID control) (Auxiliary frequency setting)	-Use as PID command value or PID feedback signal. -Use as additional auxiliary setting to various frequency setting.		
	[C1]	(C1)	Analog setting current input	-External input voltage to be used as a below command.	Input impedance: 250Ω Maximum input 30 mADC Input level is limited up to 20 mADC regardless of excessive input of 20 mADC. Gain: 0 to 200% Offset: 0 to ±5% Bias: ±100% Filter: 0.00 to 5.00s
			<Normal operation>	4 to 20 mADC / 0 to 100% / -100% to 0 to 100% (*1) 0 to 20 mADC / 0 to 100% / -100% to 0 to 100% (*1)	
			<Inverse operation>	20 to 4 mADC / 0 to 100% / -100% to 0 to 100% (*1) 20 to 0 mADC / 0 to 100% / -100% to 0 to 100% (*1)	
			(PID control) (Auxiliary frequency setting)	-Use as PID command value or PID feedback signal. -Use as additional auxiliary setting to various frequency setting.	
		(V2)	Analog setting current input	-External input voltage to be used as a below command.	Input impedance: 22kΩ Maximum input ±15 VDC Input level is limited among -10 to 10 VDC regardless of excessive input of ±10 VDC. Gain: 0 to 200% Offset: 0 to ±5% Bias: ±100% Filter: 0.00 to 5.00s
			<Normal operation>	0 to +10 VDC / 0 to 100% / -100 to 0 to 100% (0 to +5 VDC / 0 to 100%) 0 to +10 VDC / 0 to ±100% / -100 to 0 to 100%(*1) (0 to +5 VDC / 0 to ±100%)	
	(PTC)	(V2)	<Inverse operation>	+10 to 0VDC/0 to 100%/ -100% to 0 to 100% +10 to 0 VDC / 0 to ±100% / -100 to 0 to 100%(*1) (+5 to 0 VDC / 0 to ±100%)	
(PTC thermistor)		(PTC thermistor)	-PTC thermistor connection to protect the motor overheat.		
[11]	Analog common	Common terminals for analog input signals [12], [13], [C1], and analog output signals [FM].	This terminal is electrically isolated from terminal [CM], [CMY].		
Analog outputs	[FM]	Analog common	The output can be either analog DC voltage (0 to 10 VDC), analog DC current (4(0) to 20 mADC) or pulse train (25 to 32000 p/s). Any one item can be selected from the following items.	Gain: 0 to 300%	
		<Voltage output>(*3)	0 to +10 VDC / 0 to 100% (0 to +5 VDC / 0 to 100%) Input impedance of the external device: Min. 5kΩ (at 0 to 10 VDC output) (While the terminal is outputting 0 to 10 VDC, it is capable of driving up to two analog voltmeters with 10 kΩ impedance.)		
		<Current output>(*3)	4 to 20 mADC / 0 to 100% 0 to 20 mADC / 0 to 100% Input impedance of the external device: Max. 500Ω (at 4(0) to 20 mA DC output)		
		Pulse monitor(*3)	Output form Pulse output: 25 to 32000 p/s at full scale, Pulse duty: approx. 50%		
Monitor data	<ul style="list-style-type: none"> •Output frequency1 (Before slip compensation) •Output frequency2 (After slip compensation) •Output current •Load factor •Actual speed / Estimated speed •Motor output •PID output (MV) •Customizable logic output 1 to 10 •PG feedback value (The PG option card is required.) 	<ul style="list-style-type: none"> •Output voltage •Output torque •Input power •PID feedback amount (PV) •Universal AO •Analog output calibration •PID command (SV) •Position deviation in synchronous operation(The PG option card is required.) •Inverter cooling fin temperature 			



Terminal Functions

Category	Symbol	Name	Functions	Remarks	
Digital inputs	[CM]	Digital Common	Common terminals for the digital input signals.		
	[X1]	Digital input 1	<ul style="list-style-type: none"> Select multi-frequency (0 to 1 steps) Select multi-frequency (0 to 7 steps) Select ACC/DEC time (2 steps) Enable 3-wire operation Reset alarm Ready for jogging Select motor 2 (M2) Select torque limiter level 2/1 Switch to commercial power (60 Hz) DOWN (Decrease output frequency) Cancel PID control Interlock Enable communications link via RS-485 or fieldbus (option) Universal DI 	<ul style="list-style-type: none"> Select multi-frequency (0 to 3 steps) Select multi-frequency (0 to 15 steps) Select ACC/DEC time (4 steps) Coast to a stop Enable external alarm trip Select frequency command 2/1 Enable DC braking Switch to commercial power (50 Hz) UP (Increase output frequency) Enable data change with keypad Switch normal/inverse operation Cancel torque control 	
	[X2]	Digital input 2	<ul style="list-style-type: none"> Enable auto search for idling motor speed at starting Force to stop Reset PID integral and differential components Hold PID integral component Activate the limit switch at start point Switch to the serial pulse receiving mode Enable overload stop Pulse train input Select torque bias 1 Hold torque bias Line speed control Hold the line speed control frequency in the memory Count the run time of commercial power-driven motor 1 Count the run time of commercial power-driven motor 2 Select droop control Select parameter 2 Clear all customizable logic timers Run forward command No function assigned PID multistep command 2 	<ul style="list-style-type: none"> Pre-excitation (EXITE) Select local (keypad) operation Start/reset Enter the return mode Servo lock command Pulse train sign Select torque bias 2 Check brake control 	<p>Operation current at ON Source current: 2.5 to 5 mA Source current: 9.7 to 16 mA (terminal [X5])---Pulse train input Voltage level: 2 V or below</p>
	[X3]	Digital input 3			
	[X4]	Digital input 4			<p>Operation current at OFF Allowable leakage current: 0.5 mA or less Voltage: 22 to 27 VDC</p>
	[X5]	Digital input 5 / Pulse train input			
	[FWD]	Run forward command			
	[REV]	Run reverse command			

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions

External Dimensions

Options

Terminal Functions

Category	Symbol	Name	Functions	Remarks
Transistor outputs	[PLC]	PLC signal power	Connect to PLC output signal power supply. This terminal also serves as 24 V power supply.	24 VDC (22 to 27 VDC), Max. 100 mA This terminal is electrically isolated from terminal [11]s and [CMY]. allowable range: +22 to +27 VDC, 50 mA max. Leakage current 0.1mA or less
	[CM]	Digital input common	Common terminals for the digital input signals.	
	[Y1]	Transistor output 1	<ul style="list-style-type: none"> •Inverter running •Frequency (speed) arrival signal •Frequency (speed) arrival signal 3 •Frequency (speed) detected 2 •Undervoltage detected (Inverter stopped) •Inverter output limiting •Auto-restarting after momentary power failure •Deceleration after momentary power failure detected •Motor overload early warning •Keypad operation enabled •Select AX terminal function (For MC on primary side) •Stage transition signal for pattern operation •Cycle completion signal for pattern operation •Pattern operation stage 1 •Pattern operation stage 4 •Auto-resetting •Heat sink overheat early warning •Lifetime alarm •Overload prevention control •Current detected 2 •Low current detected •Under PID control •Motor stopped due to slow flowrate under PID control •Low output torque detected •Torque detected 2 •Motor 2 selected •Running reverse •Motor overheat detected by thermistor •Brake signal •Terminal [C1] wire break •Speed agreement •Low Voltage detected •Current position count overflowed •Timer output •Frequency arrival signal •Alarm indication 2 •Alarm indication 8 •Alarm output (for any alarm) •Enable input OFF •Customizable logic output signal 1 •Customizable logic output signal 3 •Customizable logic output signal 5 •Customizable logic output signal 7 •Customizable logic output signal 9 	
	[Y2]	Transistor output 2	<ul style="list-style-type: none"> •Inverter output on •Frequency (speed) arrival signal 2 •Frequency (speed) detected •Frequency (speed) detected 3 •Torque polarity detected •Inverter output limiting with delay •Inverter ready to run •Pattern operation stage 2 •Cooling fan in operation •Universal DO •Synchronization completed •Reference loss detected •Current detected •Current detected 3 •PID alarm •Torque detected 1 •Motor 1 selected •Running forward •In remote operation •Speed valid •PG error detected •Stop position override alarm •Positioning completion signal •Maintenance timer •Alarm indication 1 •Alarm indication 4 •Light alarm •Enable circuit failure detected •Braking transistor broken •Customizable logic output signal 2 •Customizable logic output signal 4 •Customizable logic output signal 6 •Customizable logic output signal 8 •Customizable logic output signal 10 	
	[CMY]	Transistor output common	Common terminal for transistor output signal terminals.	This terminal is electrically isolated from terminal [11]s and [CMY].
Relay output	[30A], [30B],[30C]	Alarm relay output (for any error)	<ul style="list-style-type: none"> -This outputs a non-voltage(dry) contact signal (1c) when the inverter is stopped with the protective function. -As a general-purpose relay output, the same functions as terminal Y can be assigned. -The logic value is switchable between "[30A] and [30C] are excited" and "non-excited." 	Contact rating: 250 VAC, 0.3 A cosφ=0.3 48 VDC, 0.5A Contact life: 200000 times (Switching at intervals of one second)
Functional safety	[EN1], [EN2]	Enable Input 1 Enable Input 2	<ul style="list-style-type: none"> Compliance with EN ISO13849-1;2008 Cat.3 PL:e (Pending) -Turning off the circuit between terminals [EN1] and [PLC] or terminals [EN2] and [PLC] stops the inverter's output transistor. (Safe Torque Off: STO) -These terminals are exclusively used for the source mode input and cannot be switched to the sink mode. -If either one of these input terminals is kept OFF for 50 ms or more, the inverter interprets it as a discrepancy, causing an alarm ECF. This alarm state can be cleared only by turning the inverter off and on. 	Source current at Turn-on : 5-10mA Threshold voltage between [PLC] - [EN] : 2V (Turn off) : 22 to 27V (Turn on) leakage current : 0.5mA or less
	[PLC]	PLC signal power		



Terminal Functions

Category	Symbol	Name	Functions	Remarks
Communication	RJ-45 connector for the keypad	Standard RJ-45 connector (RS-485 communication port 1)	<p>(1) Used to connect the inverter with the keypad. The inverter supplies the power to the keypad through the pins specified below. The extension cable for remote operation also uses wires connected to these pins for supplying the keypad power.</p> <p>(2) Remove the keypad from the standard RJ-45 connector, and connect the RS-485 communications cable to control the inverter through the PC or PLC (Programmable Logic Controller).</p> <p>The protocol selection is available from the following.</p> <ul style="list-style-type: none"> - Modbus RTU - Fuji general-purpose inverter protocol - Asynchronous start-stop system • Half-duplex - Max. transmission cable length : 1640 ft (500 m) - Maximum communication speed : 38.4kbps 	
	[DX+], [DX-], [SD]	Standard RJ-45 connector (RS-485 communication port 2) (*4)	<p>A communications port transmits data through the RS-485 multipoint protocol between the inverter and a personal computer or other equipment such as a PLC.</p> <p>The protocol selection is available from the following.</p> <ul style="list-style-type: none"> - Modbus RTU - Fuji general-purpose inverter protocol - Asynchronous start-stop system • Half-duplex - Max. transmission cable length : 1640 ft (500 m) - Maximum communication speed : 38.4kbps 	
	[CAN+], [CAN-], [SHLD]	Standard RJ-45 connector (CAN communication port) (*5)	Communication Profile: CiA CANOpen DS-301 and DSP-402	

(*1) In case of applying bias/gain function.
 (*3) Exclusive use. Need to swich on the terminal PCB.
 (*4) In the RJ-45 connector on the terminal PCB.
 (*5) In the RJ-45 connector on the terminal PCB. Concurrent use with RS-485 communications is not available.

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions

External Dimensions

Options

Type

How To Read The Model Number

FRN 0022 E 2 S - 4 □

Series name

FRN FRENIC Series

Three phase 400V class:
Rating current level of ND specification
[Model: 0022 to 0590]
Three phase 200V class:
Rating current level of HND specification
[Model: 0030 to 0069]

Destination:


E: Europe
A: Asia

Input power supply:
4: 400V, 2: 200V

Enclosure:

S: Standard (basic type)
E: EMC filter built-in type

External Dimensions

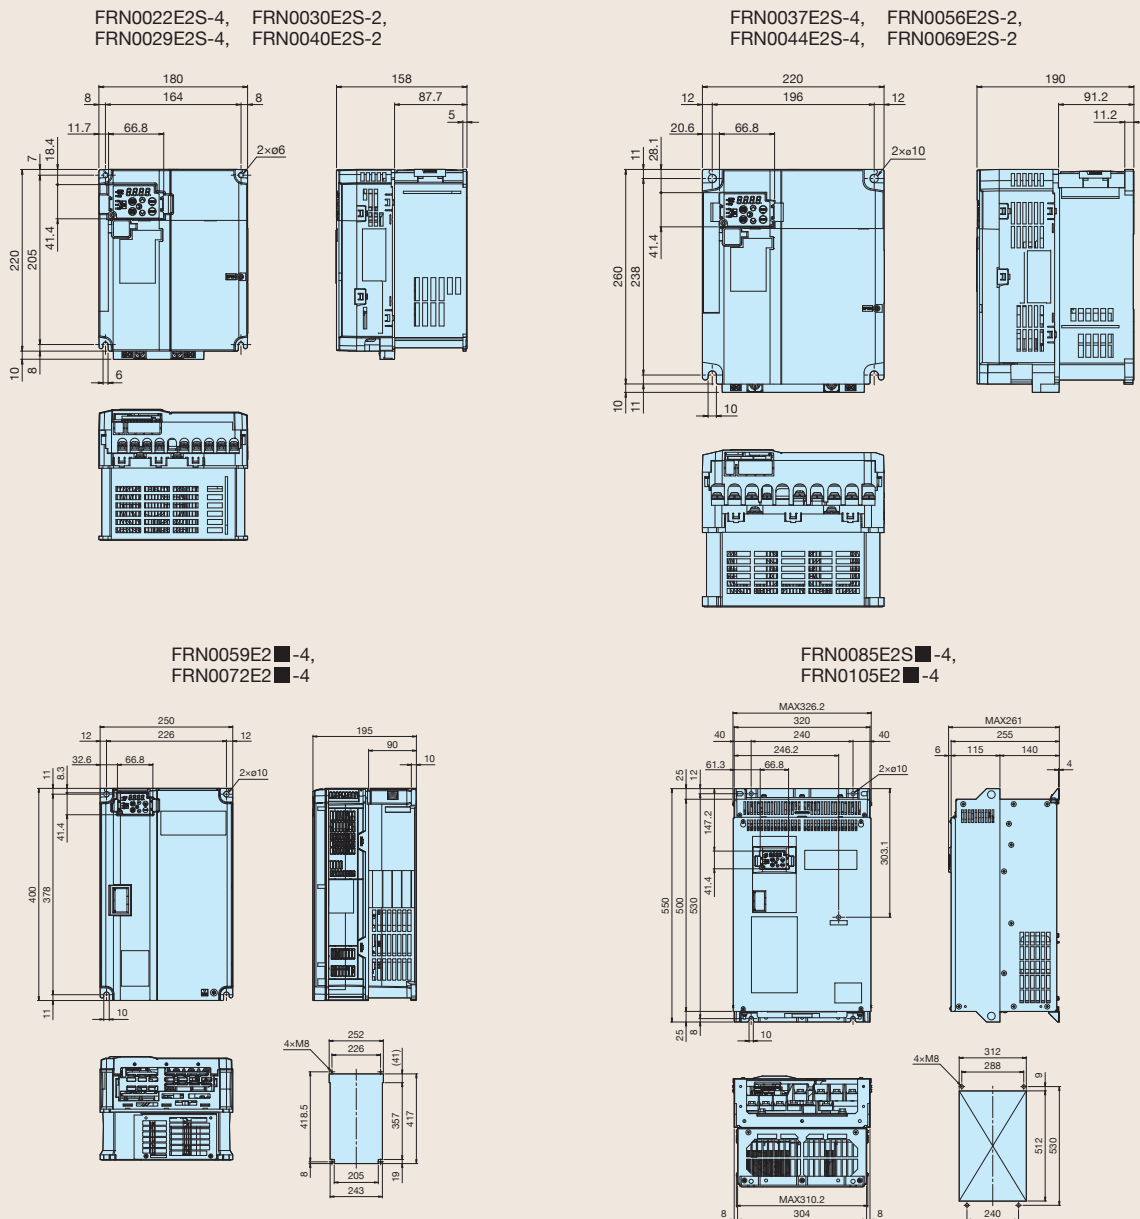


■ : S: Standard (basic type), E: EMC filter built-in type




External Dimensions

FRN0139E2 ■-4

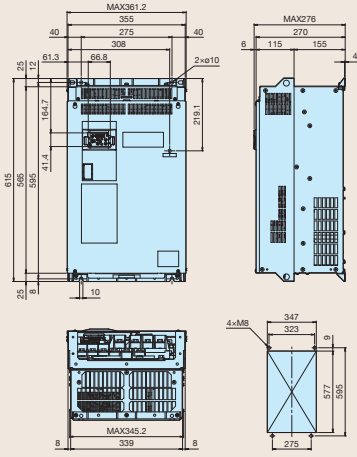


FRN0168E2 ■-4

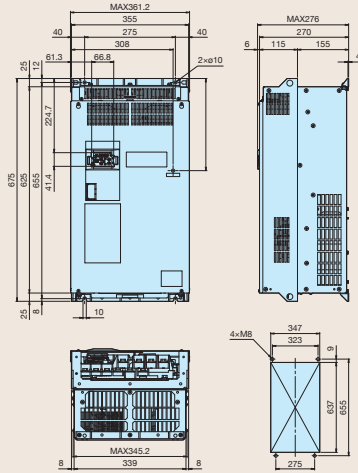


[mm]


FRN0203E2 ■-4

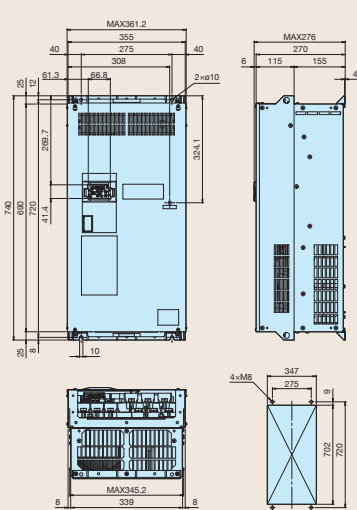


FRN0240E2 ■-4,
FRN0290E2 ■-4

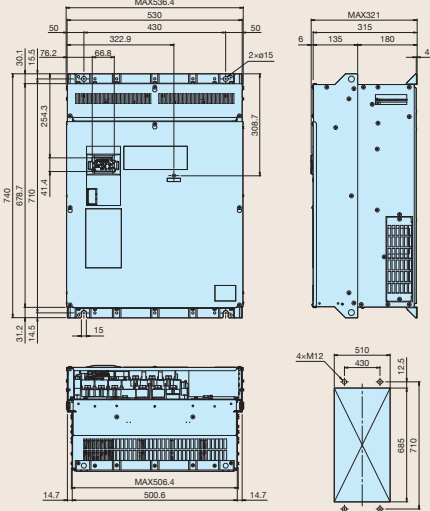

FRN0361E2 ■-4,
FRN0415E2 ■-4

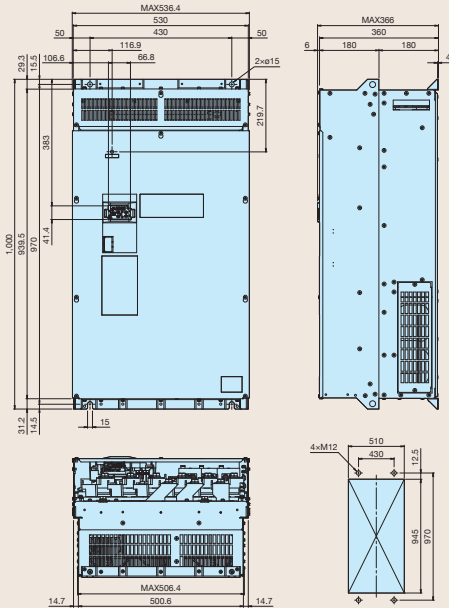

FRN0520E2 ■-4,
FRN0590E2 ■-4

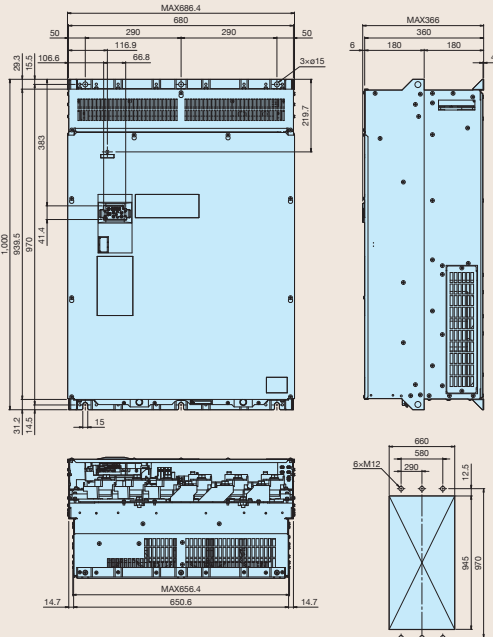

■ : S: Standard (basic type), E: EMC filter built-in type

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions




External Dimensions

Options

Keypad

TP-A1-E2C Multi function Keypad (Option)

[mm]

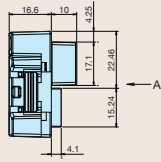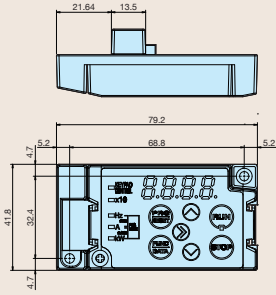

The cover for the keypad



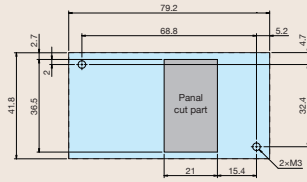


Figure of panel cut dimensions (Arrow A)

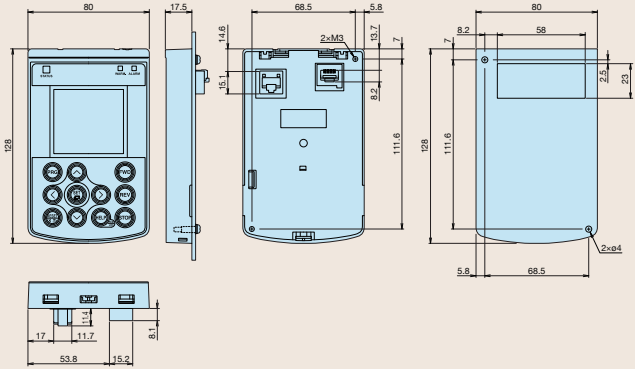

Options

Adapter

Type	Option	Functions
OPC-E2-ADP1	Mounting adapter for option card	ADP1:The adapter is mounted on the front side of the inverter. The adapter is used from 0022 of 0044 to 400V, 0030 of 0069 to 200V to FRENIC-Ace.
OPC-E2-ADP2		ADP2:The adapter is mounted inside of the inverter. The adapter is used from 0059 of 0072 to 400V to FRENIC-Ace.
OPC-E2-ADP3		ADP3:The adapter is mounted inside of the inverter. The adapter is used in more than 0085 to 400V of FRENIC-Ace.

Communication, I/O Parts

Type	Option	Functions
OPC-DEV	DeviceNet communications card	The DeviceNet interface option enables the FRENIC-Ace series of the inverters to interface with DeviceNet and the FRENIC-Ace can be operated as a DeviceNet slave.
OPC-CCL	CC-Link communications card	The CC-Link interface option enables the FRENIC-Ace series of the inverters to interface with CC-Link and the FRENIC-Ace can be operated as a CC-Link slave.
OPC-PDP3	PROFIBUS-DP communications card	The PROFIBUS DP interface option enables the FRENIC-Ace series of the inverters to interface with PROFIBUS DP and the FRENIC-Ace can be operated as a PROFIBUS DP slave.
OPC-ETH2	EtherNet/IP communications card	The EtherNet interface option enables the FRENIC-Ace series of the inverters to interface with EtherNet and the FRENIC-Ace can be operated as a EtherNet slave.
OPC-PRT	ProfiNet-RT communications card	The ProfiNet-RT interface option enables the FRENIC-Ace series of the inverters to interface with ProfiNet-RT and the FRENIC-Ace can be operated as a ProfiNet-RT slave.
OPC-COP	CANopen communications card	The CANopen interface option enables the FRENIC-Ace series of the inverters to interface with CANopen and the FRENIC-Ace can be operated as a CANopen slave.
OPC-DIO	Digital I/O interface card	DI: The frequency set-point can be given by 8,12 bits and BCD code(0 to 99.9/0 to 999) and extended 13 digital inputs are available mounting this card in the inverter. DO: The monitoring with 8bit binary code and the digital outputs (extended 8 point) are available.
OPC-AIO	Analog I/O interface card	The Analog I/O interface card enables the FRENIC-Ace series of the inverter to input analog set-points to the inverter and output analog monitors from the inverter.

* Parts adapter is necessary on the occasion of setting.

Parts Using The Control Terminal Stand

Type	Option	Functions
OPC-E2-RS	RS485 communications card	The RS-485 communications card provides two ports exclusively designed for use with the FRENIC-Ace series of the inverters.
OPC-E2-PG	PG interface (5V) card	Speed control ,position control and synchronous drive are available mounting this card in the inverter. • Open collector (pull-up resistor: 620Ω):30kHz • Complementary (totem-pole push-pull) • Voltage output
OPC-E2-PG3	PG interface (12/15V) card	Speed control, position control and synchronous drive are available mounting this card in the inverter. • Open collector (pull-up resistor: 2350Ω):30kHz • Complementary (totem-pole push-pull) • Voltage output:100kHz

Keypad

Type	Option	Functions
TP-A1-E2C	Multi-functional keypad	LCD(Liquid Crystal Display) with a back light.
TP-E1U	Simple keypad with USB port	The operation keypad adopted large-sized 7 segment LED to be excelled in visibility. And the one do not need any converter which connects to a computer directly with a commercial USB cable (mini B) to be able to use a FRENIC loader.

Major Functions

Standard Model Specifications

Common Specifications


Basic Wiring Diagram

Terminal Functions




External Dimensions

Options

DC Reactor (DCR□-□□□)

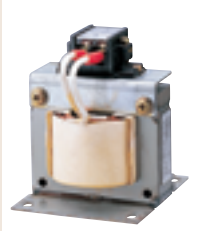

*For models with a standard motor of 75kW or more, it is included as a standard.

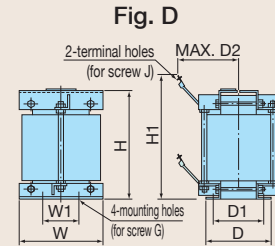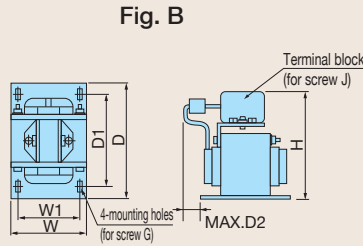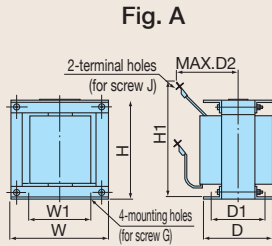

Voltage	Nominal applied motor [kW]	Inverter Type				REACTOR Type	Fig	Dimension [mm]								Approx Weight [kg]	
		ND Specification	HD Specification	HND Specification	HHD Specification			W	W1	D	D1	D2	H	H1	G		J
3-phase 400V	5.5	—	—	—	FRN0022E2	DCR4-5.5	A	86	71	100	80	20	110	—	M5 (6x9)	M4	2.6
	7.5	—	FRN0022E2	FRN0022E2	FRN0029E2	DCR4-7.5	A	111	95	100	80	24	130	—	M6 (7x11)	M5	4.2
	11	FRN0022E2	FRN0029E2	FRN0029E2	FRN0037E2	DCR4-11	A	111	95	100	80	24	130	—	M6 (7x11)	M5	4.3
	15	FRN0029E2	FRN0037E2	FRN0037E2	FRN0044E2	DCR4-15	A	146	124	120	96	15	168	—	M6 (7x11)	M5	5.9
	18.5	FRN0037E2	FRN0044E2	FRN0044E2	FRN0059E2	DCR4-18.5	A	146	124	120	96	25	171	—	M6 (7x11)	M6	7.2
	22	FRN0044E2	FRN0059E2	FRN0059E2	FRN0072E2	DCR4-22A	A	146	124	120	96	25	171	—	M6 (7x11)	M6	7.2
	30	FRN0059E2	FRN0072E2	FRN0072E2	FRN0085E2	DCR4-30B	B	152	90	157	115	100	130	190	M6 (ø8)	M8	13
	37	FRN0072E2	FRN0085E2	FRN0085E2	FRN0105E2	DCR4-37B	B	171	110	150	110	100	150	200	M6 (ø8)	M8	15
						DCR4-37C	D	210	185	101	81	105	125	—	M6 (7x13)	M8	7.4
	45	FRN0085E2	FRN0105E2	FRN0105E2	FRN0139E2	DCR4-45B	B	171	110	165	125	110	150	210	M6 (ø8)	M8	18
						DCR4-45C	D	210	185	106	86	120	125	—	M6 (7x13)	M8	8.4
	55	FRN0105E2	FRN0139E2	FRN0139E2	FRN0168E2	DCR4-55B	B	171	110	170	130	110	150	210	M6 (ø8)	M8	20
						DCR4-55C	D	255	225	96	76	120	145	—	M6 (7x13)	M10	11
	75	FRN0139E2	FRN0168E2	FRN0168E2	FRN0203E2	DCR4-75C	D	255	225	106	86	125	145	—	M6 (7x13)	M10	13
	90	FRN0168E2	FRN0203E2	FRN0203E2	FRN0240E2	DCR4-90C	D	255	225	116	96	140	145	—	M6 (7x13)	M12	15
	110	FRN0203E2	FRN0240E2	FRN0240E2	FRN0290E2	DCR4-110C	D	300	265	116	90	175	155	—	M8 (10x18)	M12	19
	132	FRN0240E2	FRN0290E2	FRN0290E2	FRN0361E2	DCR4-132C	D	300	265	126	100	180	160	—	M8 (10x18)	M12	22
	160	FRN0290E2	FRN0361E2	FRN0361E2	FRN0415E2	DCR4-160C	D	350	310	131	103	180	190	—	M10 (12x22)	M12	26
200	FRN0361E2	FRN0415E2	FRN0415E2	FRN0520E2	DCR4-200C	D	350	310	141	113	185	190	—	M10 (12x22)	M12	30	
220	FRN0415E2	FRN0520E2	FRN0520E2	FRN0590E2	DCR4-220C	D	350	310	146	118	200	190	—	M10 (12x22)	M12	33	
250	—	FRN0590E2	—	—	DCR4-250C	D	350	310	161	133	210	190	—	M10 (12x22)	M12	35	
280	FRN0520E2	—	FRN0590E2	—	DCR4-280C	D	350	310	161	133	210	190	—	M10 (12x22)	M16	37	
315	FRN0590E2	—	—	—	DCR4-315C	D	400	345	146	118	200	225	—	M10 (12x22)	M16	40	
3-phase 200V	5.5	—	—	—	FRN0030E2S	DCR2-5.5	A	111	95	100	80	20	130	—	M6 (7x11)	M5	3.6
	7.5	—	—	FRN0030E2S	FRN0040E2S	DCR2-7.5	A	111	95	100	80	23	130	—	M6 (7x11)	M5	3.8
	11	—	—	FRN0040E2S	FRN0056E2S	DCR2-11	A	111	95	100	80	24	137	—	M6 (7x11)	M6	4.3
	15	—	—	FRN0056E2S	FRN0069E2S	DCR2-15	A	146	124	120	96	15	180	—	M6 (7x11)	M8	5.9
	18.5	—	—	FRN0069E2S	—	DCR2-18.5	A	146	124	120	96	25	180	—	M6 (7x11)	M8	7.4

■ : S: Standard (basic type), E: EMC filter built-in type



MEMO

Major Functions

Standard Model Specifications

Common Specifications

Basic Wiring Diagram

Terminal Functions

External Dimensions

Options



NOTES

When running general-purpose motors

- **Driving a 400V general-purpose motor**
When driving a 400V general-purpose motor with an inverter using extremely long cables, damage to the insulation of the motor may occur. Use an output circuit filter (OFL) if necessary after checking with the motor manufacturer. Fuji's motors do not require the use of output circuit filters because of their reinforced insulation.
- **Torque characteristics and temperature rise**
When the inverter is used to run a general-purpose motor, the temperature of the motor becomes higher than when it is operated using a commercial power supply. In the low-speed range, the cooling effect will be weakened, so decrease the output torque of the motor. If constant torque is required in the low-speed range, use a Fuji inverter motor or a motor equipped with an externally powered ventilating fan.
- **Vibration**
When the motor is mounted to a machine, resonance may be caused by the natural frequencies, including that of the machine. Operation of a 2-pole motor at 60Hz or more may cause abnormal vibration.
* Study use of tier coupling or dampening rubber.
* It is also recommended to use the inverter jump frequency control to avoid resonance points.
- **Noise**
When an inverter is used with a general-purpose motor, the motor noise level is higher than that with a commercial power supply. To reduce noise, raise carrier frequency of the inverter. High-speed operation at 60Hz or more can also result in more noise.

When running special motors

- **Explosion-proof motors**
When driving an explosion-proof motor with an inverter, use a combination of a motor and an inverter that has been approved in advance.
- **Brake motors**
For motors equipped with parallel-connected brakes, their braking power must be supplied from the primary circuit (commercial power supply). If the brake power is connected to the inverter power output circuit (secondary circuit) by mistake, problems may occur.
Do not use inverters for driving motors equipped with series-connected brakes.
- **Geared motors**
If the power transmission mechanism uses an oil-lubricated gearbox or speed changer/reducer, then continuous motor operation at low speed may cause poor lubrication. Avoid such operation.
- **Single-phase motors**
Single-phase motors are not suitable for inverter-driven variable speed operation. Use three-phase motors.

Environmental conditions

- **Installation location**
Use the inverter in a location with an ambient temperature range of -10 to 50°C.
The inverter and braking resistor surfaces become hot under certain operating conditions. Install the inverter on nonflammable material such as metal. Ensure that the installation location meets the environmental conditions specified in "Environment" in inverter specifications.

Combination with peripheral devices

- **Installing a molded case circuit breaker (MCCB)**
Install a recommended molded case circuit breaker (MCCB) or an earth leakage circuit breaker (ELCB) in the primary circuit of each inverter to protect the wiring. Ensure that the circuit breaker capacity is equivalent to or lower than the recommended capacity.
- **Installing a magnetic contactor (MC) in the output (secondary) circuit**
If a magnetic contactor (MC) is mounted in the inverter's secondary circuit for switching the motor to commercial power or for any other purpose, ensure that both the inverter and the motor are fully stopped before you turn the MC on or off. Remove the surge killer integrated with the MC.
- **Installing a magnetic contactor (MC) in the input (primary) circuit**
Do not turn the magnetic contactor (MC) in the primary circuit on or off more than once an hour as an inverter fault may result. If frequent starts or stops are required during motor operation, use FWD/REV signals.
- **Protecting the motor**
The electronic thermal facility of the inverter can protect the general-purpose motor. The operation level and the motor type (general-purpose motor, inverter motor) should be set. For high-speed motors or water-cooled motors, set a small value for the thermal time constant to protect the motor.
If you connect the motor thermal relay to the motor with a long cable, a high-frequency current may flow into the wiring stray capacitance. This may cause the relay to trip at a current lower than the set value for the thermal relay. If this happens, lower the carrier frequency or use the output circuit filter (OFL).
- **Discontinuance of power-factor correcting capacitor**
Do not mount power factor correcting capacitors in the inverter (primary) circuit. (Use the DC REACTOR to improve the inverter power factor.) Do not use power factor correcting capacitors in the inverter output circuit (secondary). An overcurrent trip will occur, disabling motor operation.
- **Discontinuance of surge killer**
Do not mount surge killers in the inverter output (secondary) circuit.

Reducing noise

Use of a filter and shielded wires are typical measures against noise to ensure that EMC Directives are met.

Measures against surge currents

If an overvoltage trip occurs while the inverter is stopped or operated under a light load, it is assumed that the surge current is generated by open/close of the phase-advancing capacitor in the power system.

We recommend connecting a DC REACTOR to the inverter.

Megger test

When checking the insulation resistance of the inverter, use a 500V megger and follow the instructions contained in the Instruction Manual.

Wiring

Wiring distance of control circuit

When performing remote operation, use the twisted shield wire and limit the distance between the inverter and the control box to 20m.

Wiring length between inverter and motor

If long wiring is used between the inverter and the motor, the inverter will overheat or trip as a result of overcurrent (high-frequency current flowing into the stray capacitance) in the wires connected to the phases. Ensure that the wiring is shorter than 50m. If this length must be exceeded, lower the carrier frequency or mount an output circuit filter (OFL).

When wiring is longer than 50m, and sensorless vector control or vector control with speed sensor is selected, execute off-line tuning.

Wiring size

Select cables with a sufficient capacity by referring to the current value or recommended wire size.

Wiring type

Do not use multicore cables that are normally used for connecting several inverters and motors.

Grounding

Securely ground the inverter using the grounding terminal.

Selecting inverter capacity

Driving general-purpose motor

Select an inverter according to the applicable motor ratings listed in the standard specifications table for the inverter. When high starting torque is required or quick acceleration or deceleration is required, select an inverter with a capacity one size greater than the standard.

Driving special motors

Select an inverter that meets the following condition:
Inverter rated current > Motor rated current.

Transportation and storage

When transporting or storing inverters, follow the procedures and select locations that meet the environmental conditions that agree with the inverter specifications.